




Cumberland BUILDING STONE Sienna

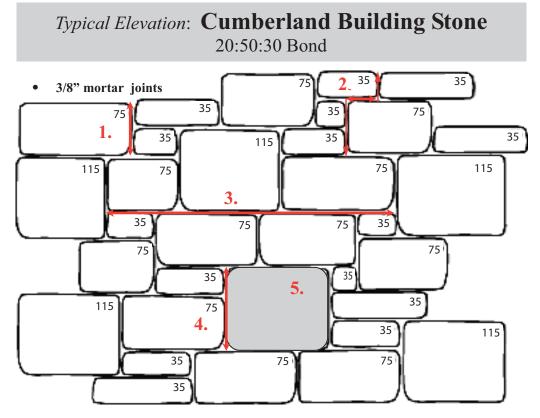


Guidelines for installation:

- 1. Two CU35s units will bond with one CU75 unit.
- 2. Maintain a minimum 4" between vertical joints.
- 3. Maintain a 4-5 foot horizontal joint length.
- 4. A CU35 / CU75 unit combination will bond with one CU115 unit. Maximum vertical joint is 11 5/8".
- 5. CU115 units should not touch one another. To maintain the standard ratio of sizes in the wall, CU115 units should be placed approximately 2 feet apart.

AVOID:

- Stepping or stringing together more than 2 units of the same height.
- Creating box patterns in the wall.

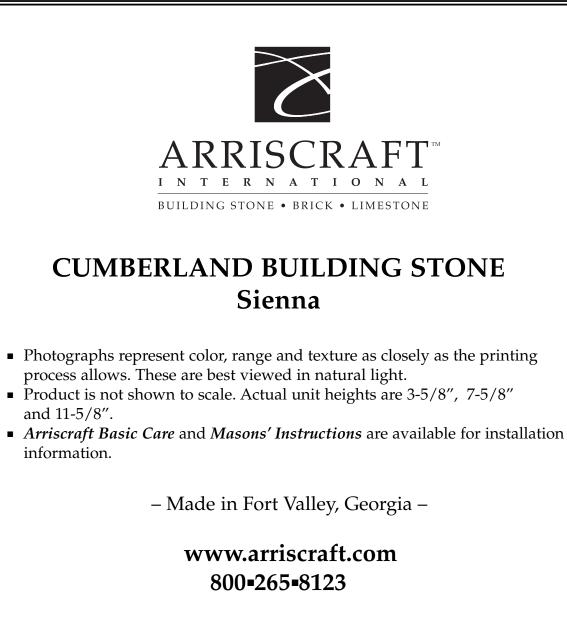

05/07